
Quick Start Guide Websense V5000

Web & Email Protection Appliance

Before you begin...

Plan your deployment before setting up the appliance. See the back of this guide for a deployment overview and reference sheet.

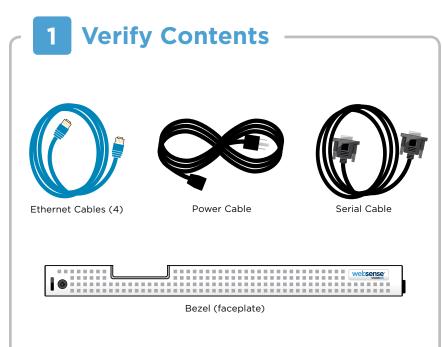


Contact Websense Technical Support if any items are missing.

2 Rack Installation

To rack the V5000 appliance, use a rack tray (not included).

1. Obtain a rack tray and install into desired server rack.

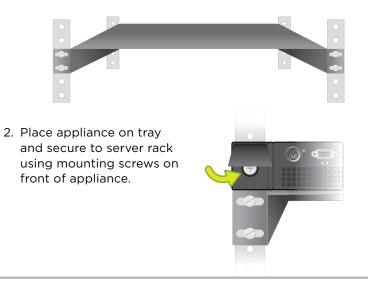

3 Determine Security Mode

The appliance supports the following security modes:

- Web (Web Filter & Security or TRITON AP-WEB)
- Email (TRITON AP-EMAIL)
- Web and Email (Web Filter & Security plus TRITON AP-EMAIL)

Based on your subscription and deployment plan, determine the appropriate security mode for this appliance.

4 Connect Network Cables

Connect the appliance interfaces required by the security mode for this appliance. *Cat 5E cables (or better) are required. Do not use crossover network cables.*

	Web	Email	Web and Email	
Required Por	ts: C P1 N	C P1	C P1 N	
Optional Port	:s: P2 *	P2	P2	
Not used fo	or Not used for Web Fil	ter & Security.		
		esata -		
Interface	Function			
С	Provides communicatioReceives connections fi	••	nd handles database downloads from Internet.	
P1 P2	Email or Web and Email • Enables TRITON AP-EM	mode: 1AIL to receive and send n I management and cluster		
	Allows Network Agent	to monitor Internet reques	ts. nation through N, connect to bidirectional span,	

5 Connect Input Device & Power On -

Serial Port Connection **OR**

Keyboard/Monitor Connection



Connect a computer to serial port using null modem cable (provided). Or, connect a terminal server to serial port using a straight-through cable (not provided). *Serial port settings are:* 9600 baud, 8 bits, no parity. Connect a monitor and keyboard to appliance, either directly or through a KVM (keyboard/ video/mouse) switch.

6 Power On Appliance

Power on the appliance and check the following indicators:

Front

• Power button is illuminated.

Rear

- LEDs for connected interfaces (NICs) are green.
- System status indicator (LED left of power supplies) is solid blue.

Contact Websense Technical Support if any indicators are not illuminated correctly.

Configuration Overview -

Please refer to the V-Series Appliance *Getting Started* guide for more details.

Initial Configuration

Appliance Command Line (firstboot script)

- Configure security mode.
- Configure Appliance Controller interface (C).

Appliance Manager

- Access the Appliance Manager via the Logon Portal.
- Configure NTP servers/system time.
- Configure applicable network interfaces.

Web Mode

TRITON Manager

- Enter subscription key, update Master Database, configure Network Agent, and configure policies in TRITON Manager.
- Requires Windows Server 2008 R2 or Windows Server 2012.

Content Gateway Manager (proxy)

• If your site uses the Websense proxy, configure user authentication and select protocols.

Email Mode

TRITON Manager

- Complete configuration wizard, enter subscription key, and configure policies in the Email module. Configure email DLP policies in the Data module.
- Requires Windows Server 2008 R2 or Windows Server 2012.


Web and Email Mode

Perform steps above for Web mode followed by Email mode, skipping the Content Gateway Manager configuration.



Appliance Deployment Overview

You can deploy one or more appliances on your network. The diagram below illustrates a basic appliance deployment. A separate computer with Windows Server® 2008 R2 or Windows Server 2012 is required for running TRITON Manager. See the V-Series Appliance *Getting Started* guide for details.

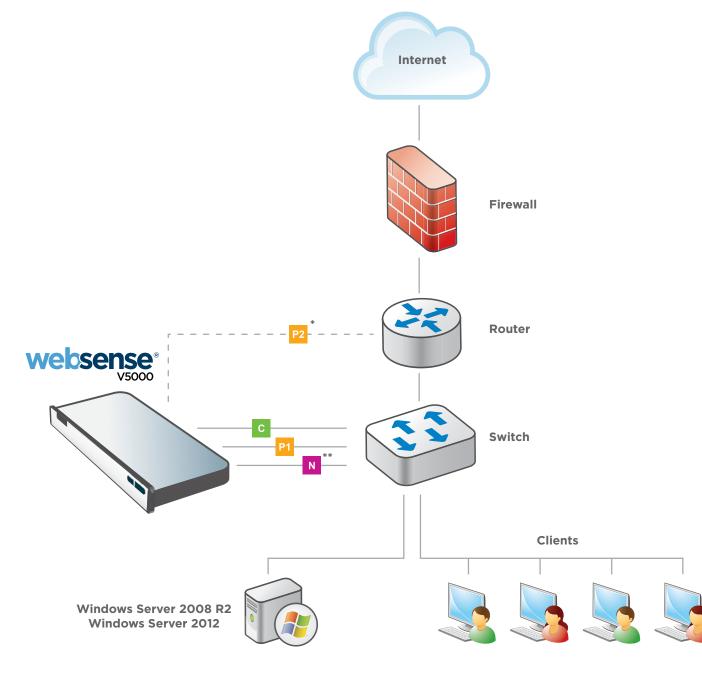

* P2 is optional and may be connected to a router or switch.

** Connect the N interface to a bidirectional span, monitor, or mirror port on the switch.

Support & Resources

Getting Started Guide www.websense.com/library/

Online Support and Contact Information support.websense.com

Deployment Reference Sheet

Appliance Information

Logon Portal URL:

admin is the default user name for Appliance Manager, TRITON Manager, and Content Gateway Manager.

Network Configuration

Appliance Contro	oller Interface (C)
IP Address:	
Subnet Mask:	
Default Gateway:	
Websense Conte	nt Gateway / TRITON AP-EM
P1	
IP Address:	
Subnet Mask:	
P2	
IP Address:	
Subnet Mask:	
Network Agent I	nterface (N)
IP Address:	
Subnet Mask:	
Default Gateway:	

TRITON Manager

Web
Policy Server IP:
Log Server IP:
Subscription Key:
Email
Log Server IP:
Authentication Mode:

See the V-Series Appliance Getting Started guide for details.

_

Drime and DNC
Primary DNS:
Secondary DNS:
Tertiary DNS:

MAIL Interfaces (P1 & P2)

Default Gateway:	
Primary DNS:	
Secondary DNS:	
Tertiary DNS:	
	Above settings apply to P1 and P2
Primary DNS:	
Secondary DNS:	
Tertiary DNS:	

SQL Server IP Address: User Name: Password: