Quick Start Guide

Websense V10000 G2

Web & Email Security Appliance



Before you begin...

Plan your deployment before setting up the appliance. See the back of this guide for a deployment overview and reference sheet.

Verify Contents







Documentation Disk Ethernet Cables (4)





Power Cables (2)

Bezel (faceplate)

Sliding Ready Rail Kit



- · Left Ready Rail
- · Right Ready Rail
- Velcro Straps (2)
- Rack Installation Instructions

Cable Management Arm Kit





- Cable Management Arm
- Cable Tie Wraps
- Static Support Tray
- CMA Installation Instructions
- Status Indicator Cable

Contact Websense Technical Support if any items are missing.

Rack Appliance



See the *Rack Installation Instructions* included in the Sliding Ready Rail kit.

Determine Security Mode

The appliance supports the following security modes:

- Web (Web Security Gateway/Anywhere)
- Email (Email Security Gateway/Anywhere)
- Web and Email (Email plus Websense Web Security or Web Security Gateway/Anywhere)


Based on your subscription and deployment plan, determine the appropriate security mode for this appliance.

Connect Network Cables —

Connect the appliance interfaces required by the security mode for this appliance. Cat 5E cables (or better) are required. Do not use crossover network cables.

	Web	Email	Web and Email
Required Ports:	C P1 N	C E1	C P1 N E1
Optional Ports:	P2 E1 E2	E2 P1 P2	P2 E2

*Not used for Websense Web Security.



Interface **Function**

- Provides communication for appliance modules and handles database downloads from Internet.
- Receives connections from TRITON Unified Security Center.
- Enables Web Security Gateway proxy to receive Internet requests and communicate with Web servers.
- Optionally bonded to E1/E2 in Email mode.
- Allows Network Agent to monitor Internet requests.
- · Connect to switch port. If sending blocking information through N, connect to bidirectional span, monitor, or mirror port on switch,
- E1 E2
- Enables Email Security Gateway to receive and send mail.
- Provides personal email management and cluster communication.
- · Requires access to mail server.
- Optionally bonded to P1/P2 in Web mode.

Connect Input Device

1. Connect to the appliance via serial port or KVM in order to access the command line interface for initial configuration. Serial port settings are: 9600 baud, 8 bits, no parity.



2. Secure power cables using velcro straps and plug power cables into an appropriate power source.



Power On Appliance

Power on the appliance and check the following indicators:

- Power button is illuminated.
- · Hard drive LEDs are green.

Rear

- Power supply LEDs are green.
- LEDs for connected interfaces (NICs) are green.
- System status indicator (LED left of power supplies) is solid

Contact Websense Technical Support if any indicators are not illuminated correctly.

Configuration Overview

Please refer to the V-Series Appliance *Getting Started* guide for more details.

Initial Configuration

Appliance Command Line (firstboot script)

- · Configure security mode.
- Configure Appliance Controller interface (C).

Appliance Manager

- Access the Appliance Manager via the Logon Portal.
- · Configure NTP servers/system time.
- Configure applicable network interfaces.

Web Mode

TRITON Unified Security Center

- Enter subscription key, update Master Database, configure Network Agent, and configure policies in TRITON - Web Security.
- Requires Windows Server 2008 R2.

Content Gateway Manager (proxy)

• Configure user authentication and select protocols.

Email Mode

TRITON Unified Security Center


- Complete configuration wizard, enter subscription key, and configure policies in TRITON - Email Security. Configure email DLP policies in TRITON - Data Security.
- Requires Windows Server 2008 R2.

Web and Email Mode

Perform steps above for Web mode followed by Email mode. If your site does not have a Websense proxy, skip the Content Gateway Manager configuration.

Appliance Deployment Overview

You can deploy one or more appliances on your network. The diagram below illustrates a basic appliance deployment. A separate computer with Windows Server® 2008 R2 is required for running TRITON Unified Security Center. See the V-Series Appliance *Getting Started* guide for details.

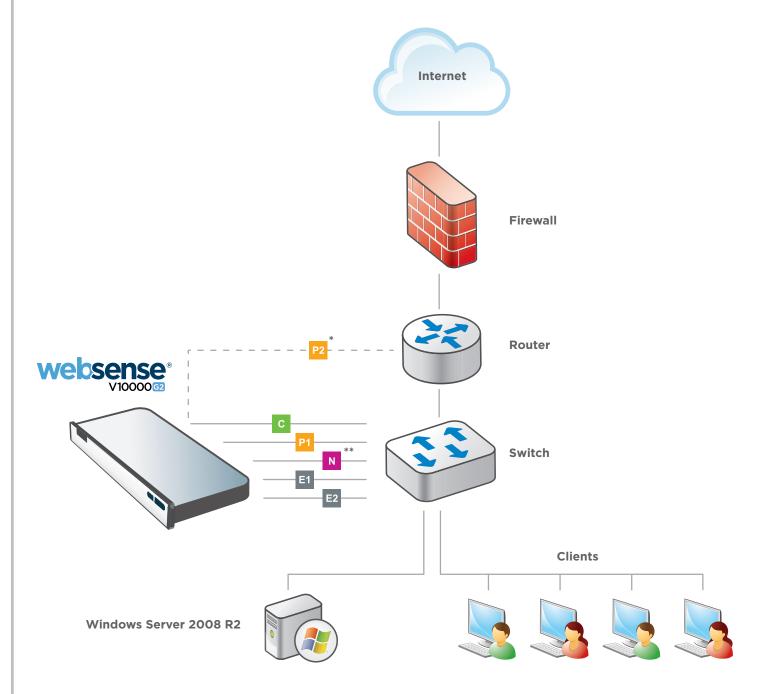

- * P2 is optional and may be connected to a router or switch.
- ** Connect to bidirectional span, monitor, or mirror port if sending blocking information through N.

Support & Resources

Getting Started Guide

www.websense.com/library/

Also available on the Documentation disk.

Online Support and Contact Information support.websense.com

Deployment Reference Sheet

Appliance Information	
Logon Portal URL:	Hostname:
admin is the default user name for Appliance Manage	r, TRITON Unified Security Center, and Content Gateway Manager.
Network Configuration	
Appliance Controller Interface (C)	
IP Address:	Primary DNS:
Subnet Mask:	Secondary DNS:
Default Gateway:	Tertiary DNS:
Websense Content Gateway Interfaces (P1	& P2)
P1	
IP Address:	Default Gateway:
Subnet Mask:	Primary DNS:
P2	Secondary DNS:
IP Address:	Tertiary DNS:
Subnet Mask:	Above settings apply to P1 and P2
Network Agent Interface (N)	
IP Address:	Primary DNS:
Subnet Mask:	Secondary DNS:
Default Gateway:	Tertiary DNS:
Email Security Gateway Interfaces (E1 & E2	
E1	
IP Address:	Default Gateway:
Subnet Mask:	Primary DNS:
E2	Secondary DNS:
IP Address:	Tertiary DNS:
Subnet Mask:	Above settings apply to E1 and E2
TRITON Unified Security Center	r
Web Security	SQL Server
Policy Server IP:	IP Address:
Log Server IP:	User Name:
Subscription Key:	Password:
Email Security	
Log Server IP:	
Authentication Mode:	

See the V-Series Appliance *Getting Started* guide for details.